

Flywheel Housing or Adapter  
between the bolts method;

F/w hsg size

(#3)= 4 3/8"

(#2)= 4 3/4"

(# 1)= 5 1/4"

Flywheel Housing or Adapter

00= 34 1/2" outside / 33 1/2" BHC To BHC

0 = 28 " outside / 26 3/4" BHC To BHC

1/2 0 = 25 1/2 " outside / 24 3/8" BHC To BHC

1 = 21 3/4 " outside / 20 7/8" BHC To BHC

2 = 19 1/4 " outside / 18 3/8" BHC To BHC

3 = 17 3/4 " outside / 16 7/8" BHC To BHC

4 = 15 7/8 " outside / 15" BHC To BHC

5 = 14 " outside / 13 1/8" BHC To BHC

6 = 12 1/8 " outside / 11 1/4" BHC To BHC