



INSTRUMENT PANELS

			New C-type	New D-type
①	Switch	Key switch (Starter switch)	●	●
		Engine stop switch	●	●
		Alarm buzzer (C.W. temp., L.O. pressure)	●	●
		Alarm buzzer stop switch	●	●
		Illumination switch for meters	●	●
②	Alarm lamp unit	Battery not charging	●	●
		C.W. high temperature	●	●
		L.O. low pressure	●	●
③	Tachometer	Boost pressure high (for 4LHA-STE)	●	●
		Tachometer with hour meter	●	●
④	Sub meter unit	L.O. pressure meter	●	●
		C.W. temperature meter	●	●
⑤	Clock unit	Boost meter (Turbo)	—	●
		Quartz clock	—	●

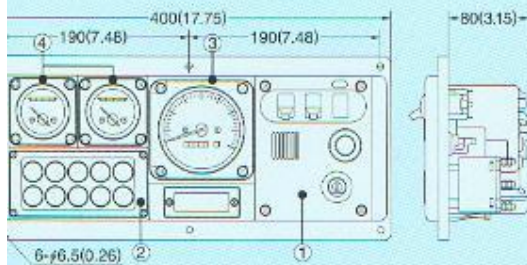

New C-type

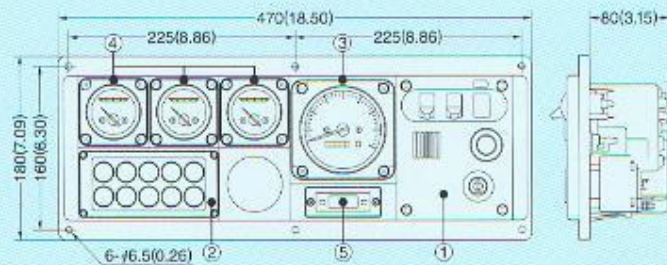

New D-type

Note: All data subject to alteration without notice.

INMAR DIESEL AMERICA CORP. 901 Corporate Grove Drive, Buffalo Grove, IL 60089

INMAR EUROPE B.V. Bruggelaan 11 1332 BS Almere-de Vaart, The Netherlands

INMAR DIESEL ENGINE CO., LTD. 1-2, 2-chome, Yaesu, Chuo-ku, Tokyo 104, Japan

